AQUATOP 1 YEAR LIMITED WARRANTY

Products are guaranteed by AQUATOP® Aquatic Supplies to the original purchase against defective material and workmanship under normal use for a period of 1 year from the date of the original purchase through an Authorized Aquatop Reseller.

Products have no warranty if:

- 1.) The product has been serviced, modified or tampered with by anyone other than AQUATOP Aquatic Supplies,
- 2.) The product has been abused or damaged (including broken or cracked bulbs), and/ or
- 3.) The product has been transported without proper packaging,
- 4.) The product was purchased from an Unauthorized Reseller.

Note: All sales from Amazon and Ebay (regardless of seller) do not qualify for any warranty coverage. Please see www.aquatop.com for more information.

AQUATOP EXCLUSIVE 1 + 1 EXTENDED WARRANTY

The additional 1 Year Extended Warranty applies when you REGISTER online with Aquatop. Register your Extended Warranty at www.aquatop.com.

Note: Extended warranty is available for qualifying products. See www.aquatop.com for a list of qualifying products.

- 1.0. Terms and Conditions of Guarantee.
- 1.1. Aquatop warrants to the purchaser, for 1 Year from date of original purchase through an Authorized Aquatop Reseller, to repair or replace goods where fault is found due to defective materials or faulty workmanship and where goods do not operate in accordance with the instructions.
- 1.2. All claims for repair or replacement must be made at place of purchase.
- 1.3. The original and dated Proof of Purchase (receipt) must be supplied with all goods claims. Please also provide this Guarantee where possible.
- 1.4. All goods subject to claim under Guarantee should be prepared for transportation in the original packaging or other comparable packaging which offers the same degree of protection.
- 1.5. Where goods are repaired or replaced under Guarantee, these goods are Guaranteed for the remainder of either the original Guarantee or Extended Guarantee period.
- 1.6. Where claims on inspection reveal goods are in normal working order, Aquatop will request reimbursement of all reasonable costs incurred.

WARRANTY LIABILITY DISCLAIMER

In no event will Aquatop® be liable for any consequential or incidental damages, including but not limited to, lost sea life, personal injury, property damage, equipment damage, lost profits, lost wages, lost savings, lost income, etc., arising out of the use of any Aquatop products.

For more information on tank health and maintenance as well as other products carried by Aquatop,

visit our website: www.aquatop.com


775 Columbia St. Brea, CA 92821 Tel: (888) 915-2782 (562) 697-9860

> www.aquatop.com V1 /2021





BOW FRONT TANK

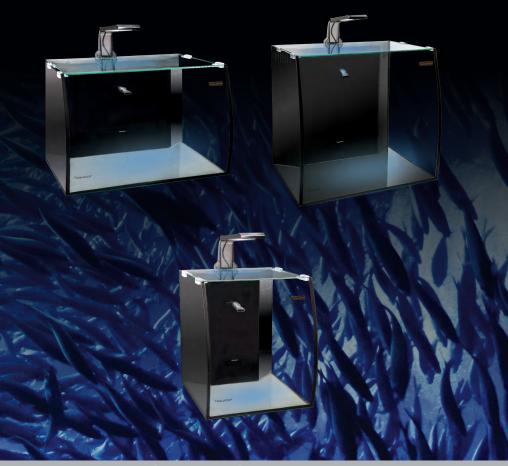

OWNER'S MANUA


IMPORTANT SAFETY INSTRUCTIONS

WARNING - To guard against injury, basic safety precautions should be observed, including the following:

- 1. READ AND FOLLOW ALL SAFETY INSTRUCTIONS.
- DANGER To avoid possible electrical shock, special care should be taken since water is employed in the
 use of aquarium equipment.
- Never attempt to repair this appliance yourself. Return the appliance to an authorized service facility for service or discard the appliance. Do not operate the appliance if it has a damaged cord or plug. If cord is damaged, the luminaire should be destroyed.
- A. If the appliance falls into the water, DO NOT reach for it. First unplug the appliance and then retrieve it from the water. If electrical components of the appliance get wet, unplug it immediately and allow the appliance to thoroughly dry. Carefully examine the appliance after installation. It should not be plugged in if water is present on parts not intended to be wet.
- B. To avoid the possibility of the appliance plug getting wet, position the tank to the side of a wall mounted receptacle to prevent water from dripping onto the receptacle. A "drip loop", should be arranged by the 'user for each cord connecting an aquarium device to the receptacle. The "drip loop" is the part of the cord below the level of the receptacle or the connector if an extension cord is in use, to prevent the water from travelling along the cord and coming into contact with the receptacle. If plug or receptacle gets wet, DO NOT un-plug the cord. Disconnect the fuse or circuit breaker that supplies power to the receptacle then unplug the transformer and examine for the presence of water in the receptacle.
- 4. **WARNING** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- 5. Always unplug the appliance from the outlet when not in use, before putting on or taking off parts and before cleaning. Never yank the cord to pull the plug from the outlet.
- 6. Do not use this appliance for any purpose other than that recommended by the manufacturer. The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.
- 7. Do not install or store the appliance where it will be exposed to weather or temperatures below freezing.
- 8. Make sure the appliance is mounted correctly and securely positioned on the aquarium before operating the appliance.
- 9. Read and observe all important safety notices on the appliance.
- 10. If an extension cord is necessary, a cord with the proper current (amps) rating should be used. A cord rated for fewer amps than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.
- 11. This appliance is intended FOR INDOOR HOUSEHOLD USE ONLY

COMPONENT LIST

- 1. Glass Aquarium
- 2. Anti-slip Pad
- 3. Glass aquarium cover
- 4. Clips for glass aquarium cover
- 5. Circulation Pump with Output Nozzle
- 6. Foam Filter Blocks
- 7. SkyAgua Mini ULTRA BRIGHT Aguarium LED Light

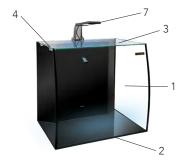

COMPONENT LIST CONT'



INSTALLING YOUR AQUARIUM

 Thoroughly rinse the aquarium, cover and filter media, using fresh water and a damp cloth. Never use soap on any component placed in your aquarium as soap is harmful to fish.

NOTE: Place aquarium on a level, sturdy surface; away from any electrical equipment, direct sunlight, drafts, heat sources or high traffic areas. Position Anti-slip pad on surface first before placing aquarium.

2. Position foam filter media (6), pump (5). Output nozzle comes assembled but must be removed from hose and pump to run through hole in filter box wall, then reassembled.

NOTE: Built-in back panel filtration area allows for customization of additional filter media (not included) to meet your unique needs.

- 3. Install the SAQ Mini LED fixture according to the instructions included with the light.
- 4. When filling aquarium with water, add the correct doses of a water conditioner to ensure water is safe for livestock(sold separately).

NOTE: Consult with your fish dealer for proper species and fish stocking levels

5. Center pump compartment in the filter box will have fluctuation in water level due to evaporation water top off, etc. This is the place to examine your water level to ensure that the pump remains submerged at all times. Maintain water level in this compartment at least 3 inches over the top of the pump when the pump is operating.

*** VERY IMPORTANT NOTE. DO NOT INSTALL AN AQUARIUM HEATER IN THE CENTER PUMP COMPARTMENT. WATER LEVELS FLUCTUATE IN THIS CHAMBER AND COULD PRESENT A FIRE OR ELECTRICAL HAZARD. If a heater is needed, install it in the main viewing portion of the aquarium. AQUATOP is not liable for any damages resulting from improper installation or maintenance of your aquarium and / or the included components.

MAINTANING YOUR AQUARIUM

NOTE: To ensure the well-being of aquarium inhabitants, it is essential to maintain your aquarium. At the very minimum, remove 20% of the water once a week and replace with tap water that is of similar temperature to your tank and treated with the correct dose of Water Conditioner. (Sold separately) NOTE: Regular replacement of foam filter media is essential to ensure optimum performance. The filter media should be rinsed in de-chlorinated water, alternating sides at each water change in order to maintain continuous biological activity. (During weekly water changes, alternate which side foam you will rinse, do not rinse both at the same time)

MOTOR CLEANING

For best results, clean pump impeller and impeller well, every three (3) to six (6) months.