


## PLACEMENT

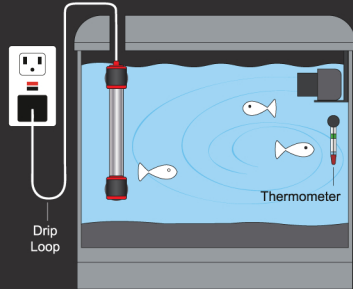

## INSTALLATION

1. Properly place heater into aquarium using the placement diagram.
2. Plug the heater into a wall outlet creating a drip loop for safety.
3. Press the temperature control button once to enter SET mode (LCD display will begin to flash). Press the button to set the desired temperature. Once you've reached the desired setting wait 3-4 seconds and the display will stop flashing and the temp is set.
4. The unit is heating when the blue light is on and the LCD will display the actual water temp in the aquarium.

## TIPS

- Always disconnect the heater from the power outlet prior to aquarium maintenance.
- Removal, disconnect power and allow heater to cool for 10-15 minutes before removing from aquarium.
- If the heater is cracked or shows signs of moisture inside, disconnect power immediately.
- Water level must be maintained at or above the minimum water level line marked on the heater.
- For indoor aquarium use only

## SPECIFICATIONS

MODEL	POWER	VOLT/FREQ	CAPACITY
EX-100	100W	110-120V / 60Hz	Up to 25 Gal
EX-200	200W	110-120V / 60Hz	Up to 50 Gal
EX-300	300W	110-120V / 60Hz	Up to 80 Gal
EX-500	500W	110-120V / 60Hz	Up to 130 Gal



CAUTION: QUARTZ GLASS  
HANDLE WITH CARE